



How to make Robes connect in a corner of the room:

To make the Robes connect in a corner it's really quite simple, providing you follow these few basic steps below when designing/quoting/ordering your Robe inserts using our on-line system.


Step: 1

If you want corner shelving in the corner, then this is the easiest and simplest method. You simply order this straight from the web site, as the corner shelving option comes complete (as it's own individual unit).


Then you can just screw/attach the remaining robes right up to it. You can also custom size the corner shelves, so that's not a problem either (i.e.: having one width different to the other or/and one depth different to the other).

Below is an example of an 'L' shaped robe configuration -The picture below shows the corner shelving option



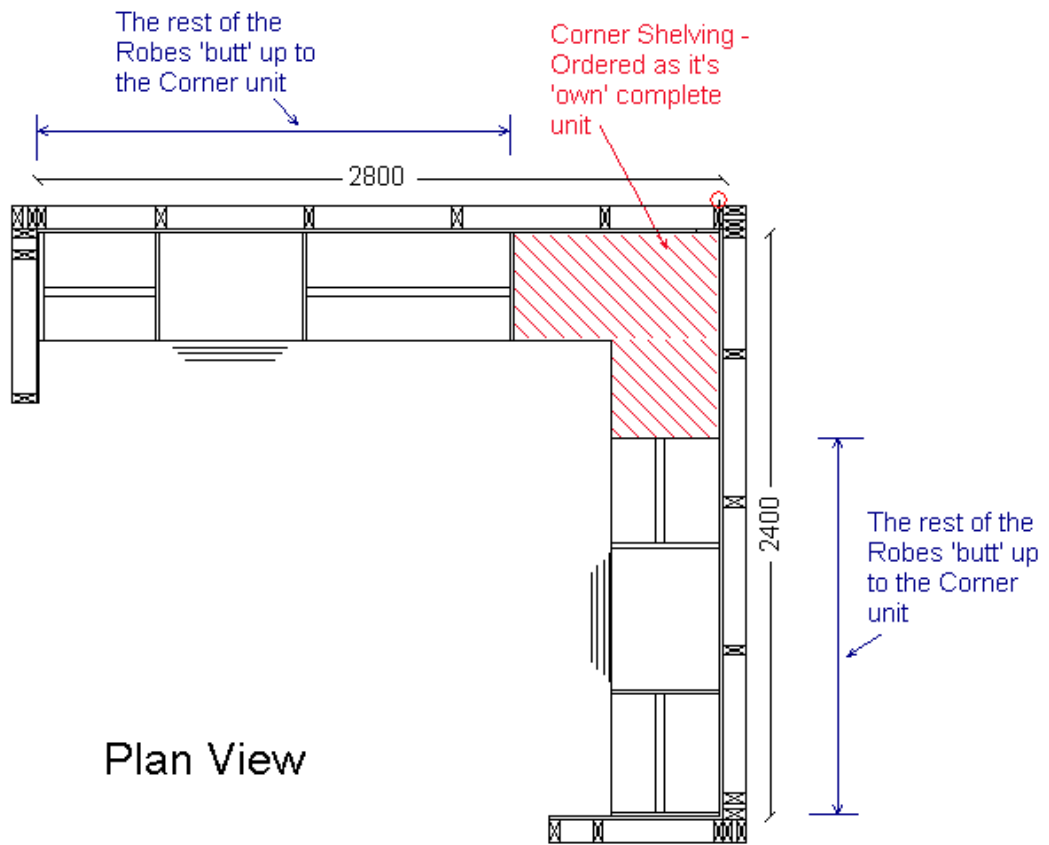


Wall 1

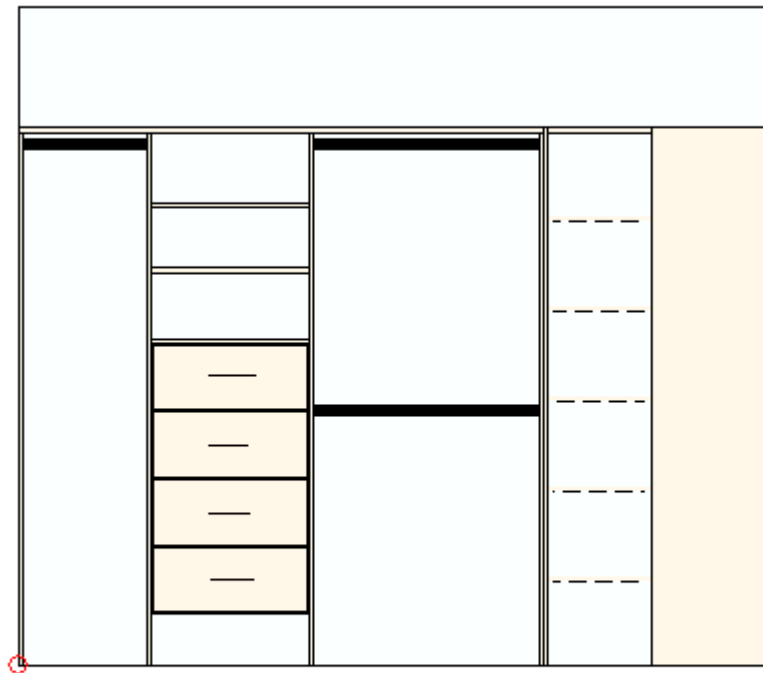

← 500 → ← 600 → ← 850 → ← 850 →

Elevation

Wall 2

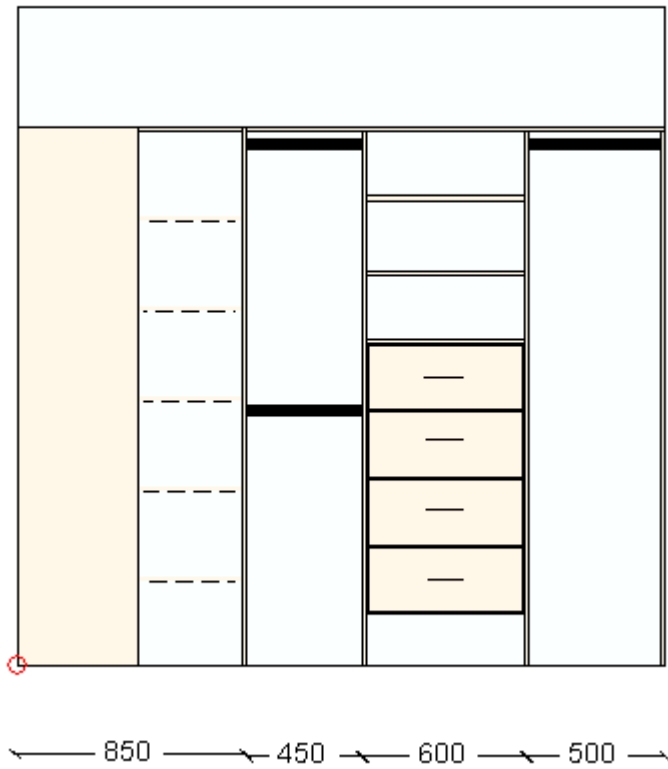


To have shelving in the corner is the simplest option, but usually this is not the most desired option. Most Customers prefer to have either a Full Hang or Double Hang cloths rail extend into the corner of the room as this suits their design better. Below is an example of a 'typical' 'L' shaped robe configuration -The picture below shows a Full Hang Robe Section extending into the Corner:




Step: 2

How to order a Full Hang or Double Hang robe in a corner of a room:

Below is a simple (typical) corner wardrobe insert design for an “L” shaped Robe.

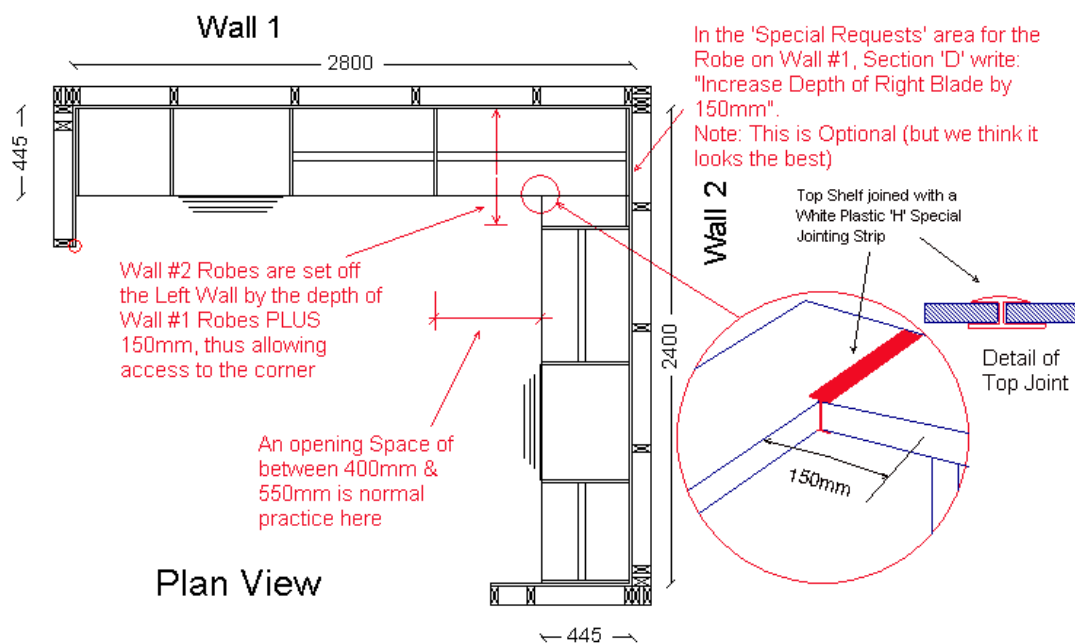


Wall 1

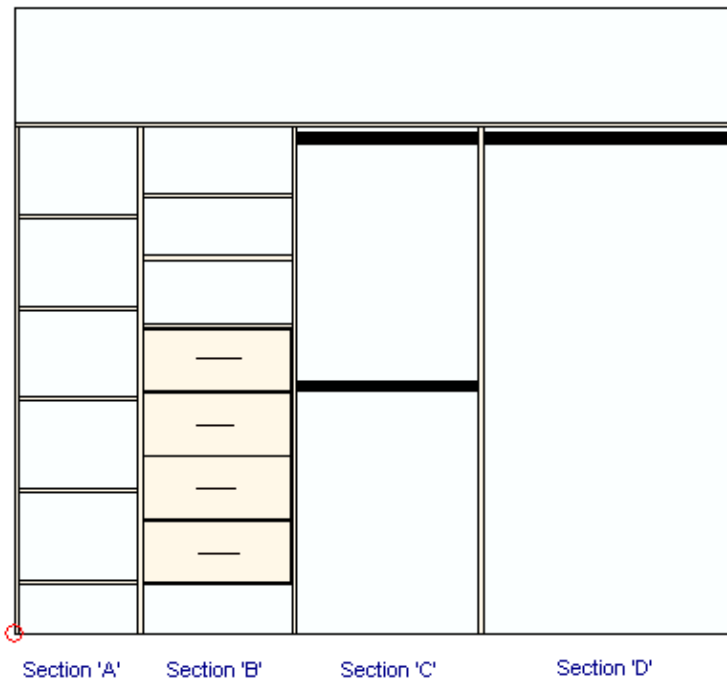

In the 'Special Requests' area for the Robe on Wall #1, Section 'D' write: "Increase Depth of Right Blade by 150mm".
Note: This is Optional (but we think it looks the best)

← 500 → ← 600 → ← 700 → ← 1000 →

Elevation

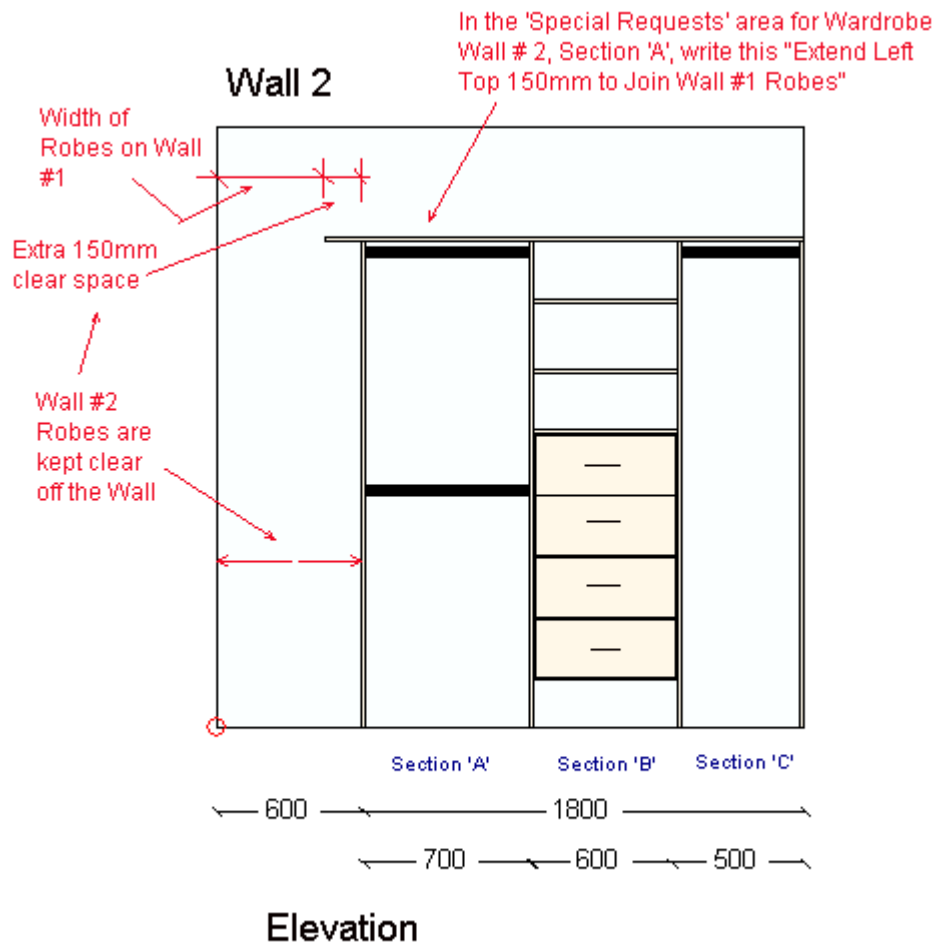

The important thing to do is when you get to Section 'A' of Wall #2 in our on-line web site cabinet shop is remembering to put in **“Extend Left Top 150mm to Join Wall #1 Robes”** in the **‘Special Requests’** area of that Robe.

This is important as this indicates to us that you wish to extend the Top Left shelf by 150mm and add-in the special 'H' jointing strip that is required to join the 2x top shelves together.

Another thing that many Customers do (and we also recommend) is to extend the Depth of the Right Blade on Wall #1, Section 'D' by 150mm –This is because it finishes the Right end better to the Robes on Wall #2. You don't have to do this, it's more a personal choice.

If you do want this, then put **“Increase Depth of Right Blade by 150mm”** in the **‘Special Requests’** area of “Wall 1, Section 'D'”

You can simply use the same principle if you had a “U” shaped Robe –It's really just another Full Hang or Double Hang Robe section in the other corner.

I hope this has been helpful,

Thank-you,

From the team at
Cabinets On-Demand On-Line
Ph: 1300 876 778
www.cabinetsondemand.com.au
or
www.cabinets-online.com.au